

Electrolux

Factory Parts Catalog

Product No.	E30GF74HPS1
	31066396E80S1
Series	30" f/s gas
Color	stainless
Market	North America
Wiring Diagram	318403413
Owner's Guide	318203958
Installation Instructions	318201775
Service Data Sheet	318204805

Electrolux

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995529582
08/11/24
(EN/SERVICE/ECL)
377

30-INCH FREE STANDING GAS RANGE

Model No.
E30GF74H

Copyright © 2008 Electrolux Home Products, Inc.
All rights reserved.


BACKGUARD

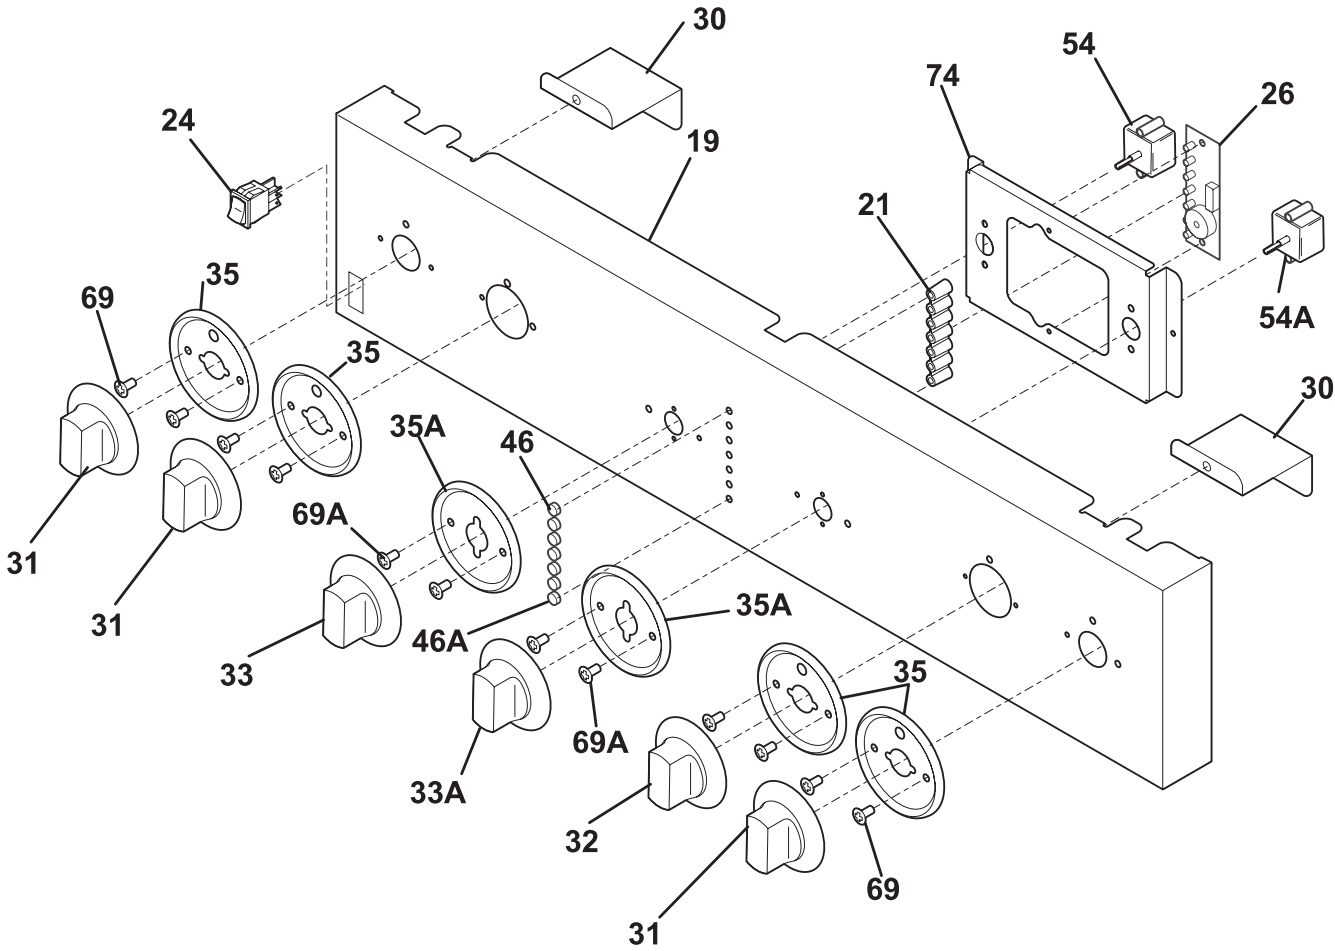

CE30GF74HPS1

BACKGUARD


POS. NO	PART NO.	DESCRIPTION
19	7318285722	Panel, control, stainless
21	7318389500	Retainer, lens
24 #	75308015487	Switch, oven light, rocker
26 #	75304452799	Board, indicator light, (2), LED
30	7318377000	Support, control panel, (2)
31	7318242252	Knob, control, stainless, (3)
32	7318242253	Knob, control, stainless, dual
33	7318242230	Knob, selector
33A	7318242231	Knob, control, oven
35	7318251911	Skirt, (6)
35A	7318251912	Skirt, (2)
46	7318044501	Lens, indicator light, blue, (5)
46A	7318228310	Lens, indicator light, (2)
54 #	75304452797	Control, oven selector
54A#	75304452798	Control, oven temp.
69	75303300265	Screw, 8-18 X 1/2, (4)
69A	75303311306	Screw, 8-18 x 0.375, (6)
74	7318383901	Bracket, controls
* #	7318532143	Harness, wiring, display/control
* #	7318532142	Harness, wiring, relay board
*	7318163602	Cleaner, stainless steel
*	708016432	Screw, truss head, 8-18 x 0.375

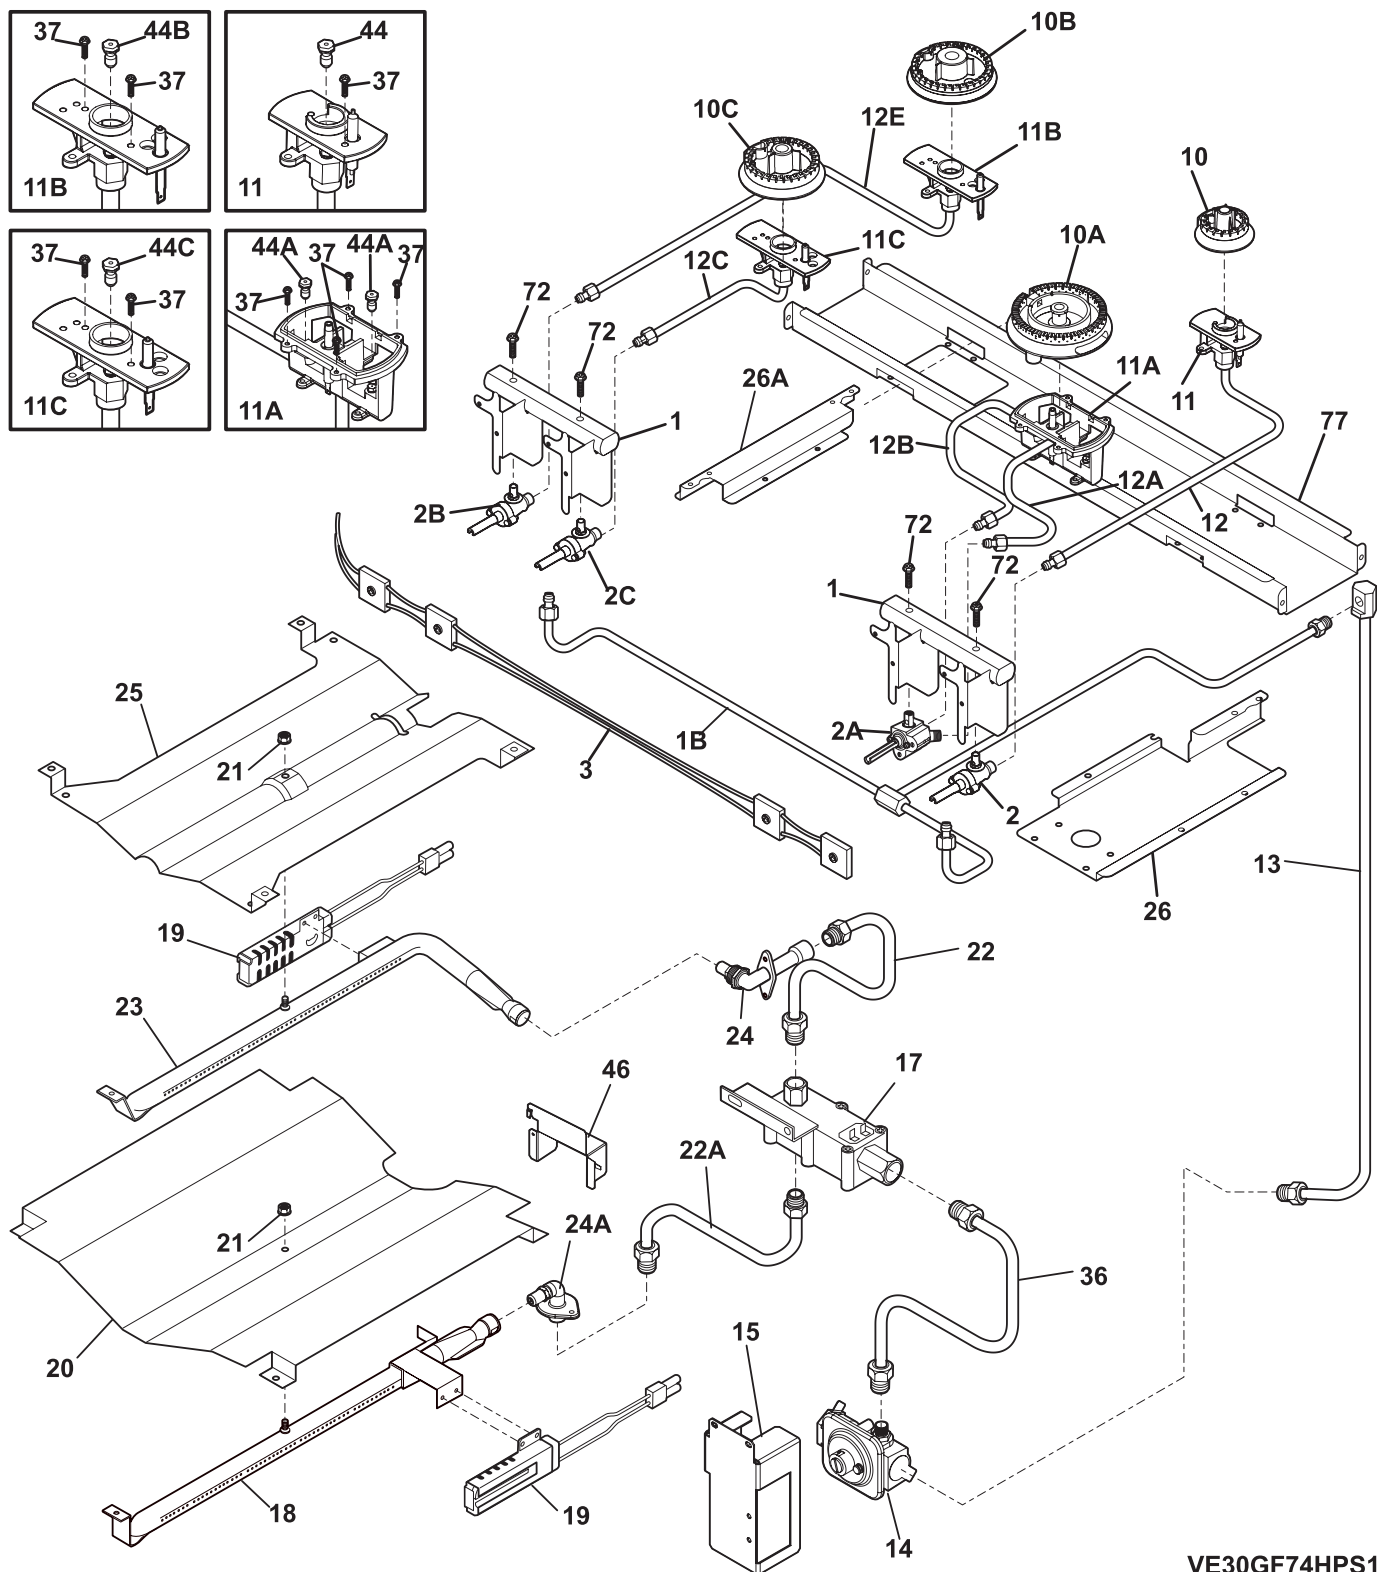BURNER**VE30GF74HPS1**

BURNER

POS. NO	PART NO.	DESCRIPTION
1 #	7318357801	Manifold, (2)
*	75303311333	Screw, 8-32 x 3/8
1B #	7318305402	Tube, manifold, 3/8, interconnect
2 #	7316520700	Valve, burner, 5K
2A #	7316412510	Valve, top burner, 18K, dual port
2B #	7316520703	Valve, burner, 14.2K
2C #	7316520701	Valve, burner, 9.5K
3 #	7318232634	Wiring Harness, w/igntr switch
10 #	7316510800	Burner, sealed, 5K
10A#	7316525400	Burner, sealed, dual, 18K
10B#	7316511200	Burner, sealed, 14K
10C#	7316511000	Burner, sealed, 9.5K
11 #	7316524800	Ignitor/orifice assy., top burner, 5K, w/holder
11A#	7316525100	Ignitor/orifice assy., top burner, 18K, w/holder
11B#	7316525000	Ignitor/orifice assy., top burner, 14K, w/holder
11C#	7316524900	Ignitor/orifice assy., top burner, 9.5K, (2), w/holder
12 #	7318366727	Tube, burner, RH rear, 5K
12A#	7318366731	Tube, 18K burner, RH front
12B#	7318366732	Tube, 18K burner, RH front
12C#	7318366733	Tube, 9.5K burner, LH front
12E#	7318366728	Tube, 14K burner, LH rear
13 #	7318360620	Tube, regulator, to manifold
14 #	7316082907	Regulator-pressure
15	7318376120	Bracket, regulator
17 #	75303210798	Valve, safety
18 #	7318292210	Burner, bake, 18000
19 #	7318177710	Ignitor, oven burner
20	7318290400	Baffle, bake burner
21	75303323000	Nut, Keps
22 #	7318305212	Tube, broil supply
22A#	7318305211	Tube, bake supply
23 #	7318292300	Burner, broil, 14000
*	75303323277	Screw, 8-18 X 13/32
24 #	7316409703	Elbow, mixer
24A#	7318347219	Mixer Elbow, bake
25	7316401301	Baffle, broil burner
26	7318363802	Bracket, channel mtg
26A	7318363902	Bracket, channel mtg.
36 #	7318177812	Tubing, oven supply
37	7316518100	Screw, ignitor assy mt, 6-32 x .62
44 #	7316523504	Orifice, top burner, 5K
44A#	7316523508	Orifice, top burner, 18K
44B#	7316523506	Orifice, top burner, 14K
44C#	7316523500	Orifice, top burner, 9.5K
46	7318536250	Protector, air shutter
72	7316215600	Screw, valve mtg., 1/4 - 20
77	7318355503	Bracket, channel mtg.
* #	7318186919	LP Conversion Kit
* #	7318199782	Wiring Harness, ignitor
*	75303311306	Screw, 8-18 x 0.375, (6)


BODY

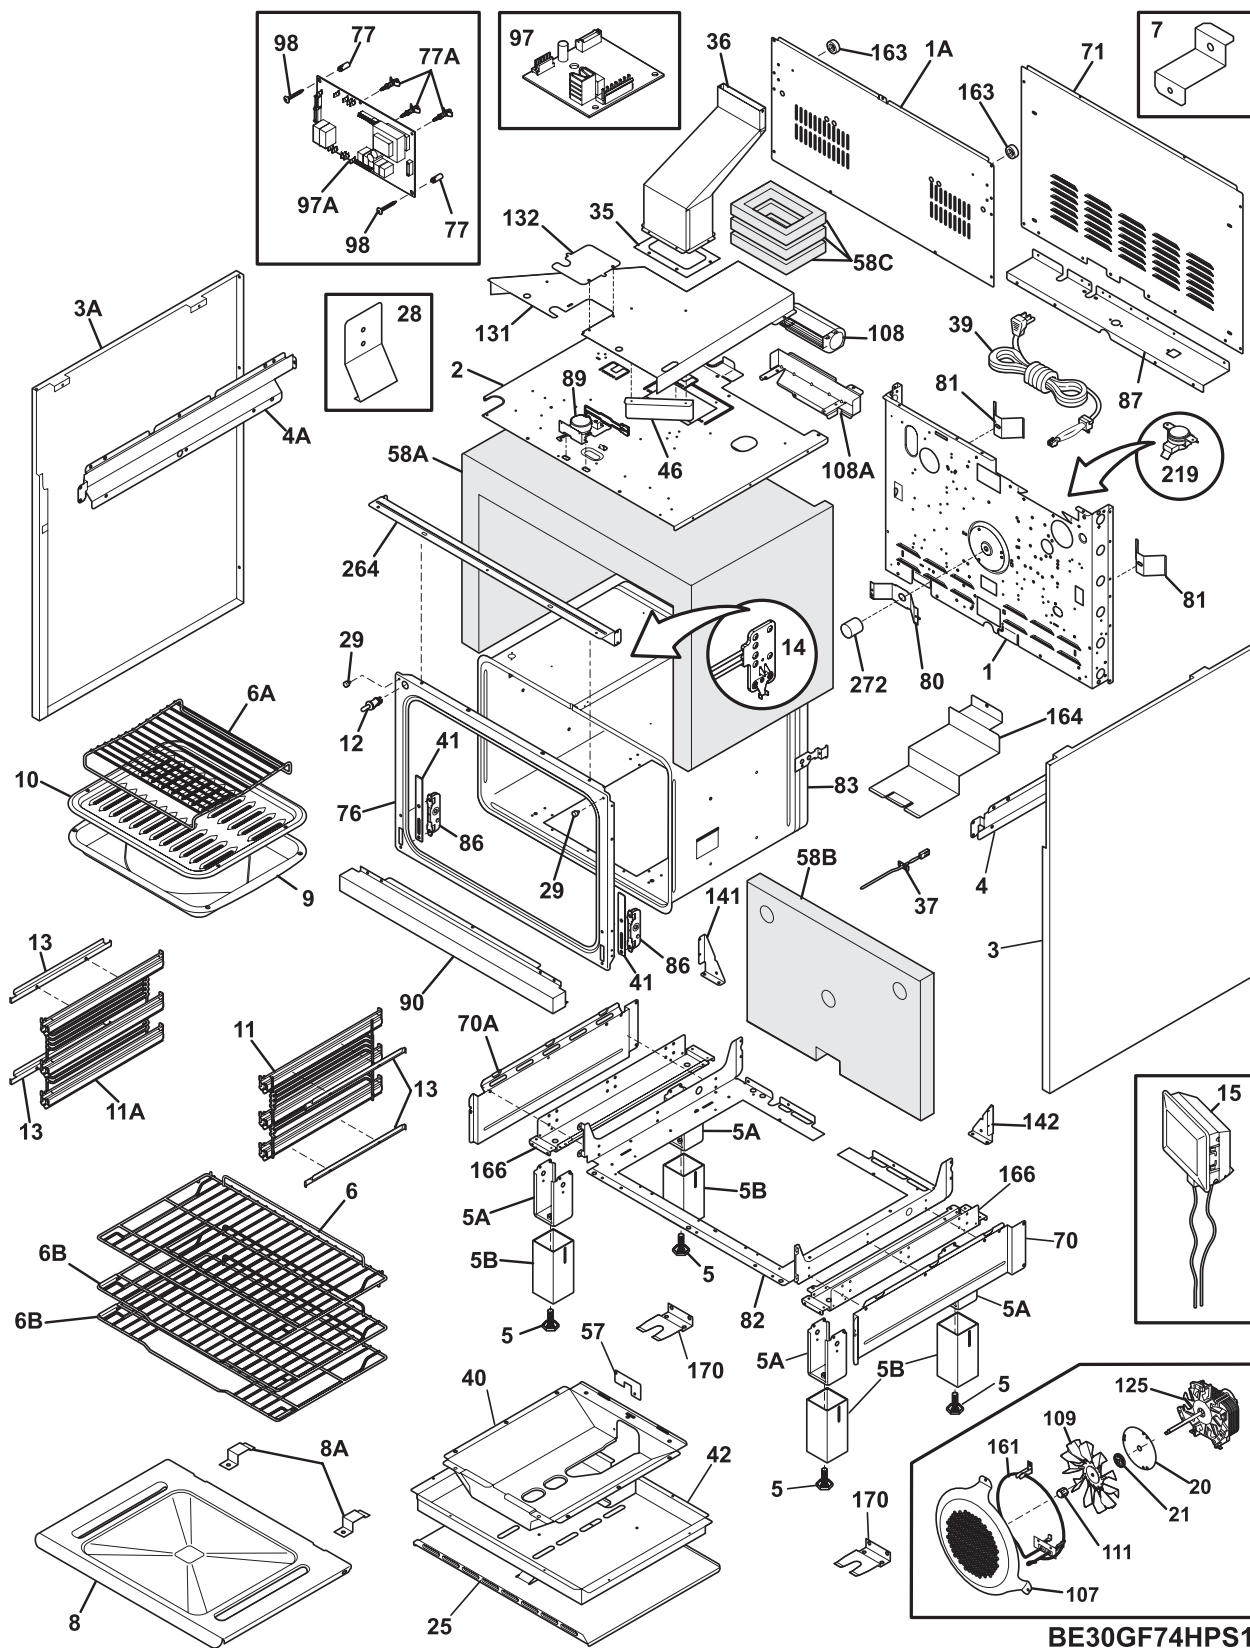

BODY

POS. NO	PART NO.	DESCRIPTION
1	7318259230	Back, main
1A	7318353110	Panel, back, upper
2	7318258930	Shield, insulation, upper
3	7318352702	Panel, side, stainless, LH
3A	7318352703	Panel, side, stainless, RH
4	7318356002	Panel, upper side, RH
4A	7318356003	Panel, upper side, LH
5	7318175506	Screw, leveling
5A	7318368800	Bracket, leveling leg, (4)
5B	7318352404	Cover, leveling leg, (4)
6	7318240103	Shelf, oven, fixed
6A	7318365800	Rack, broiler pan
6B	7318345404	Shelf, oven, extendable, (2)
7	7318533700	Bracket, main back, (4)
8	7318290502	Panel, oven, bottom
8A	7318367401	Bracket, retainer, (2)
*	75303325980	Screw, 10-32 x 0.437
9	7318138801	Pan, broiler
10	7318126401	Insert, broiler pan
11	7318240016	Glide & Support assy, oven shelves, RH
11A	7318240017	Glide & Support assy, oven shelves, LH
12	7316445501	Switch, oven light, door frame
13	7318603913	Bracket, ladder mtg., (4)
14	7318903401	Switch, rack sensing
15	7318241002	Lamp, oven, (2), halogen
20	7318389400	Plate, retainer
21	7318389000	Seal, ring
25	7318291900	Bracket, shield, lower
28	7318369301	Bracket, side panel, (2)
29	7318147411	Bumper, (2)
35	7318291300	Seal, flue cavity
36	7318561201	Flue Assembly
37 #	7316217002	Probe, oven temp
39	7318144008	Cord, service
40	7318291800	Box, oven burner
*	75303131801	Screw, 10 x 3/8
41	7318366601	Spacer, front frame
42	7318288710	Box, oven burner
46	7318258905	Deflector, air
57	7318268300	Cover, burner opening
58A	7318386103	Insulation, oven wrapper
58B	7318362131	Insulation, oven back
58C	7318362153	Insulation, flue, (3)
70	7318302710	Shield, insulation, right, (2)
70A	7318302711	Shield, insulation, left, (2)
71	7318300910	Panel, cover
76	7318056232	Front, oven
77	7316247900	Spacer, power board
77A	7316114100	Spacer
80	75303320846	Plate, oven mtg
81	7318192400	Spring, oven


BODY

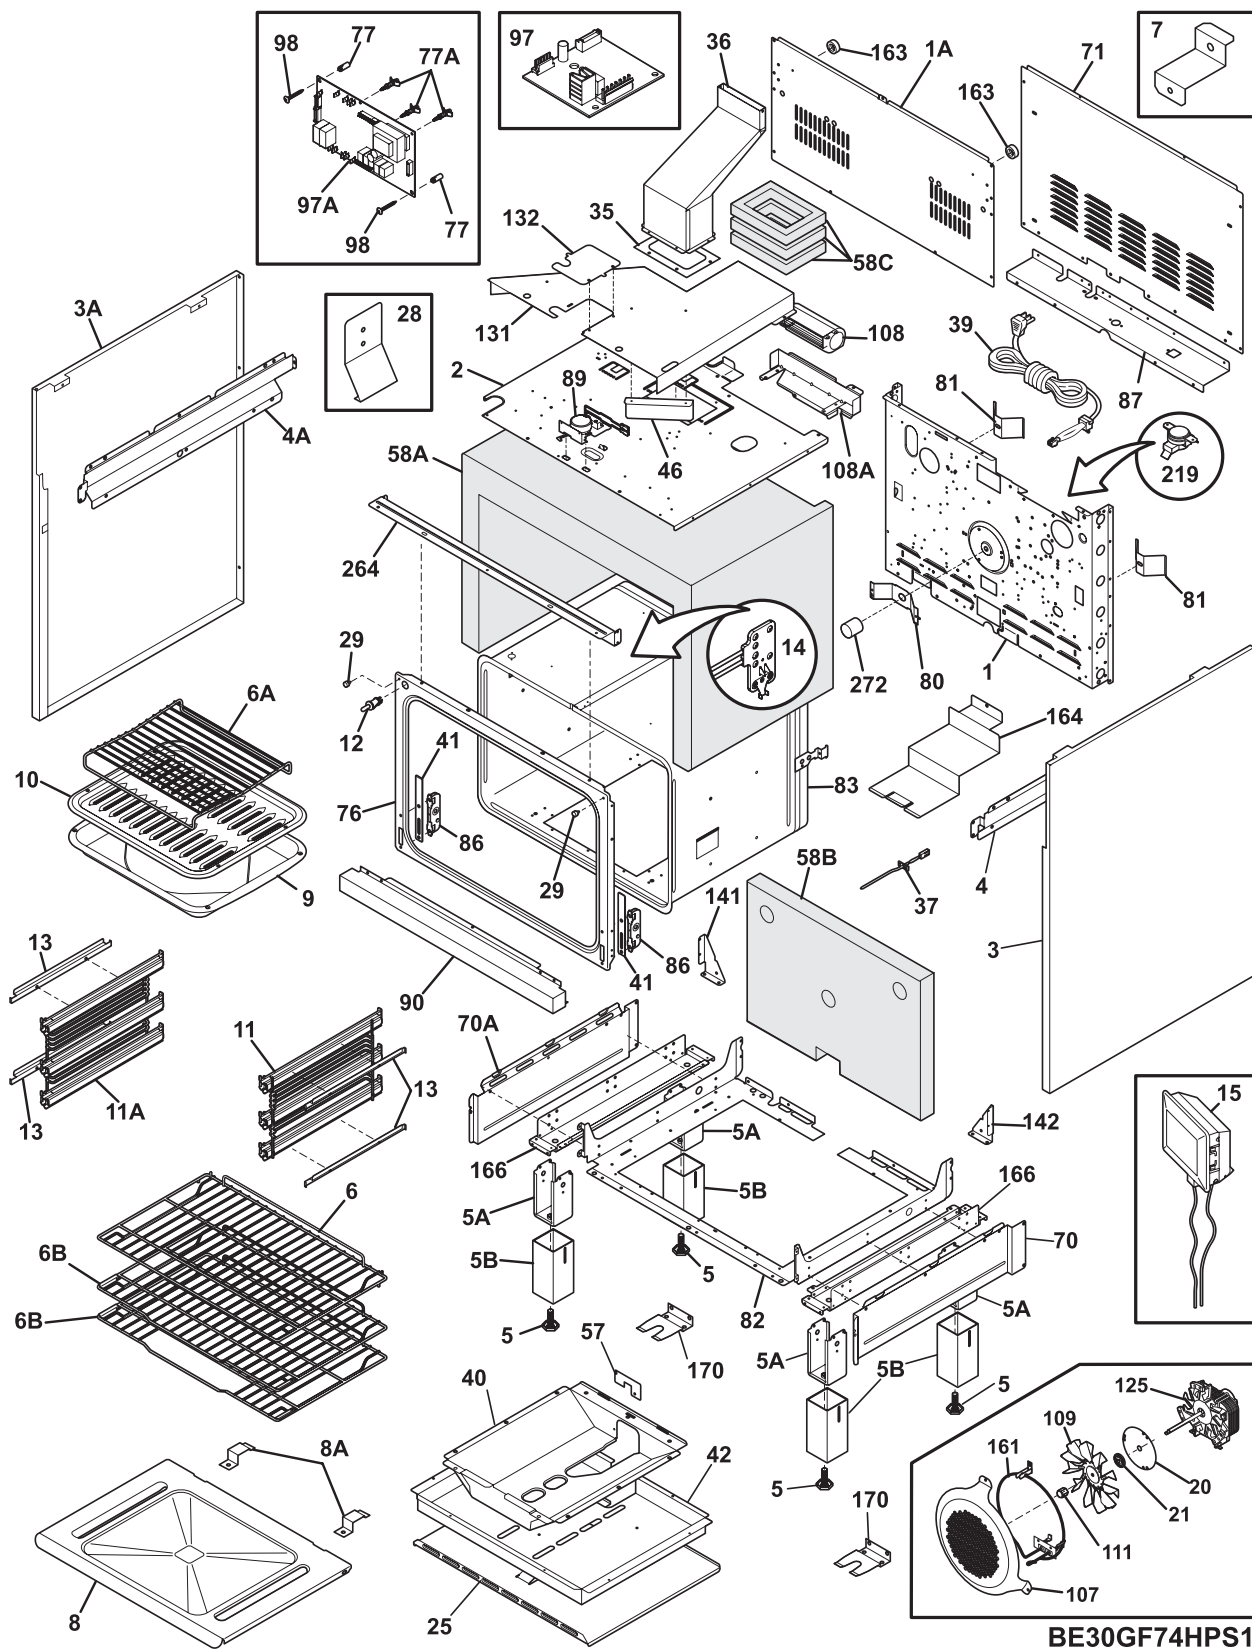

BODY

POS. NO	PART NO.	DESCRIPTION
*	75303323129	Screw, 8 X 0.750
82	7318258740	Shield, insulation, lower
83	7318327023	Liner, oven
86	7318241406	Receptacle, hinge, (2)
86*	75304461333	Screw, 10-32 x 17/32
87	7318260621	Bracket, cable mtg.
89 #	7318261215	Motor, latch assy
89*	7318370338	Wiring Harness, latch
*	75303325978	Screw, shoulder head, 8-18 X 1/2
90	7318355001	Trim, bottom, stainless
97 #	7316519202	Board, relay, convection
97A#	7316455710	Board, power, relay
98	73201861	Screw, 6 x 0.375, (4)
107	7318906601	Cover, fan
108#	7318073028	Motor, blower
*	708016432	Screw, truss head, 8-18 x 0.375
108A	7318251300	Bracket, fan support
109	7318398300	Fan Blade
111	7318399800	Nut-fan retainer
125#	75304463302	Motor-convection
131	7318272905	Box, vent
132	7318003004	Plate, shield
141	7318368402	Bracket, reinforcement, RH
142	7318368403	Bracket, reinforcement, LH
161#	7318255503	Element, convection, 350 W
163	7318531700	Spacer, (2)
164	7318125310	Plate, connection
166	7318352501	Bracket, leveling leg, (2), reinforcement
170	7318335701	Anti-tip & accessories
219#	7318003633	Thermostat, safety
264	7318257723	Trim, oven, black, front
272	7318249403	Tube, protector
* #	7318532123	Harness, wiring, main
*	75304400192	retainer wire
*	7318165800	Spacer
*	73051050	Screw, shoulder
*	75303211311	Screw, 8 x 0.500
*	75303300265	Screw, 8-18 X 1/2, (4)
*	75303311306	Screw, 8-18 x 0.375, (6)
*	75303311333	Screw, 8-32 x 3/8
*	75303323136	Screw ground
*	75303323139	Screw, 10-24 x 0.906
*	75303323277	Screw, 8-18 X 13/32
*	75303324184	Screw, 8-18 x 5/16, black, (4)
*	75304415832	Screw, 8-18 x 0.406
*	75304436875	Screw, 8-18 X 1/2, black
*	75304454881	Screw, #8-18 x 3/8

TOP

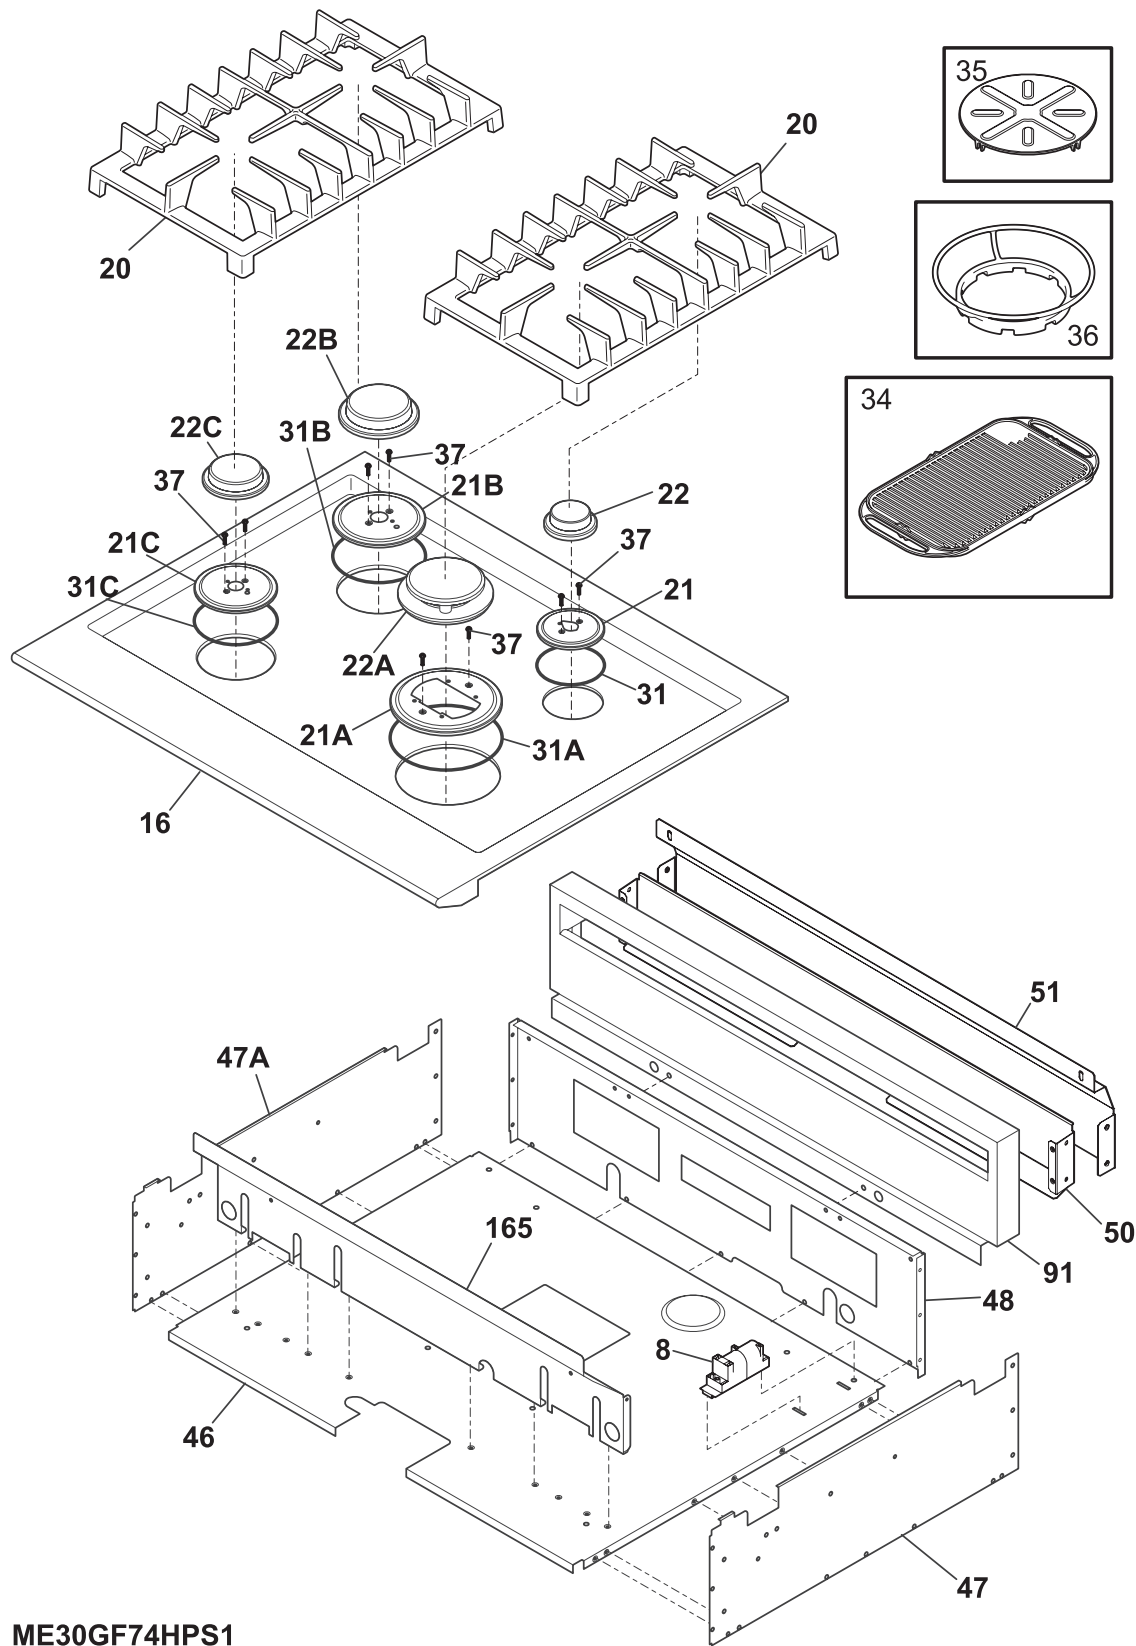


ME30GF74HPS1

TOP

POS. NO	PART NO.	DESCRIPTION
8 #	7316135701	Module, spark
16	7318185224	Main Top Assy, frame/glass, stainless/black
20	7318361403	Grate, top burner, black, (2), double
21	7316514800	Skirt, 5K burner, black
21A	7316515100	Skirt, 18K burner, black
21B	7316515000	Skirt, 14K burner, black, (2)
21C	7316514900	Skirt, 9.5K burner, black
22	7316510902	Cap, 5K burner, black
22A	7316511502	Cap, 18K burner, black, (2)
22B	7316511302	Cap, 14K burner, black, (2)
22C	7316511102	Cap, 9.5K burner, black
31	7316515200	Seal, 5K burner
31A	7316515203	Seal, 18K burner
31B	7316515202	Seal, 14K burner, (2)
31C	7316515201	Seal, 9.5K burner
34	7318251600	Griddle
35	7318254200	Simmer Plate
36	7318254300	Support, WOK
37	7316240600	Screw, assy mtg, (8), ignitor/orifice
46	7318242930	Panel, bottom
47	7318241706	Panel, side, RH
47A	7318241707	Panel, side, LH
*	75303311306	Screw, 8-18 x 0.375, (6)
48	7318241812	Panel, rear
50	7318537400	Deflector, backsplash, front
51	7318537501	Deflector, backsplash, black, rear
91	7318533400	Backsplash, stainless
165	7318355101	Deflector, heat
*	7318165800	Spacer
*	75303211311	Screw, 8 x 0.500

DOOR

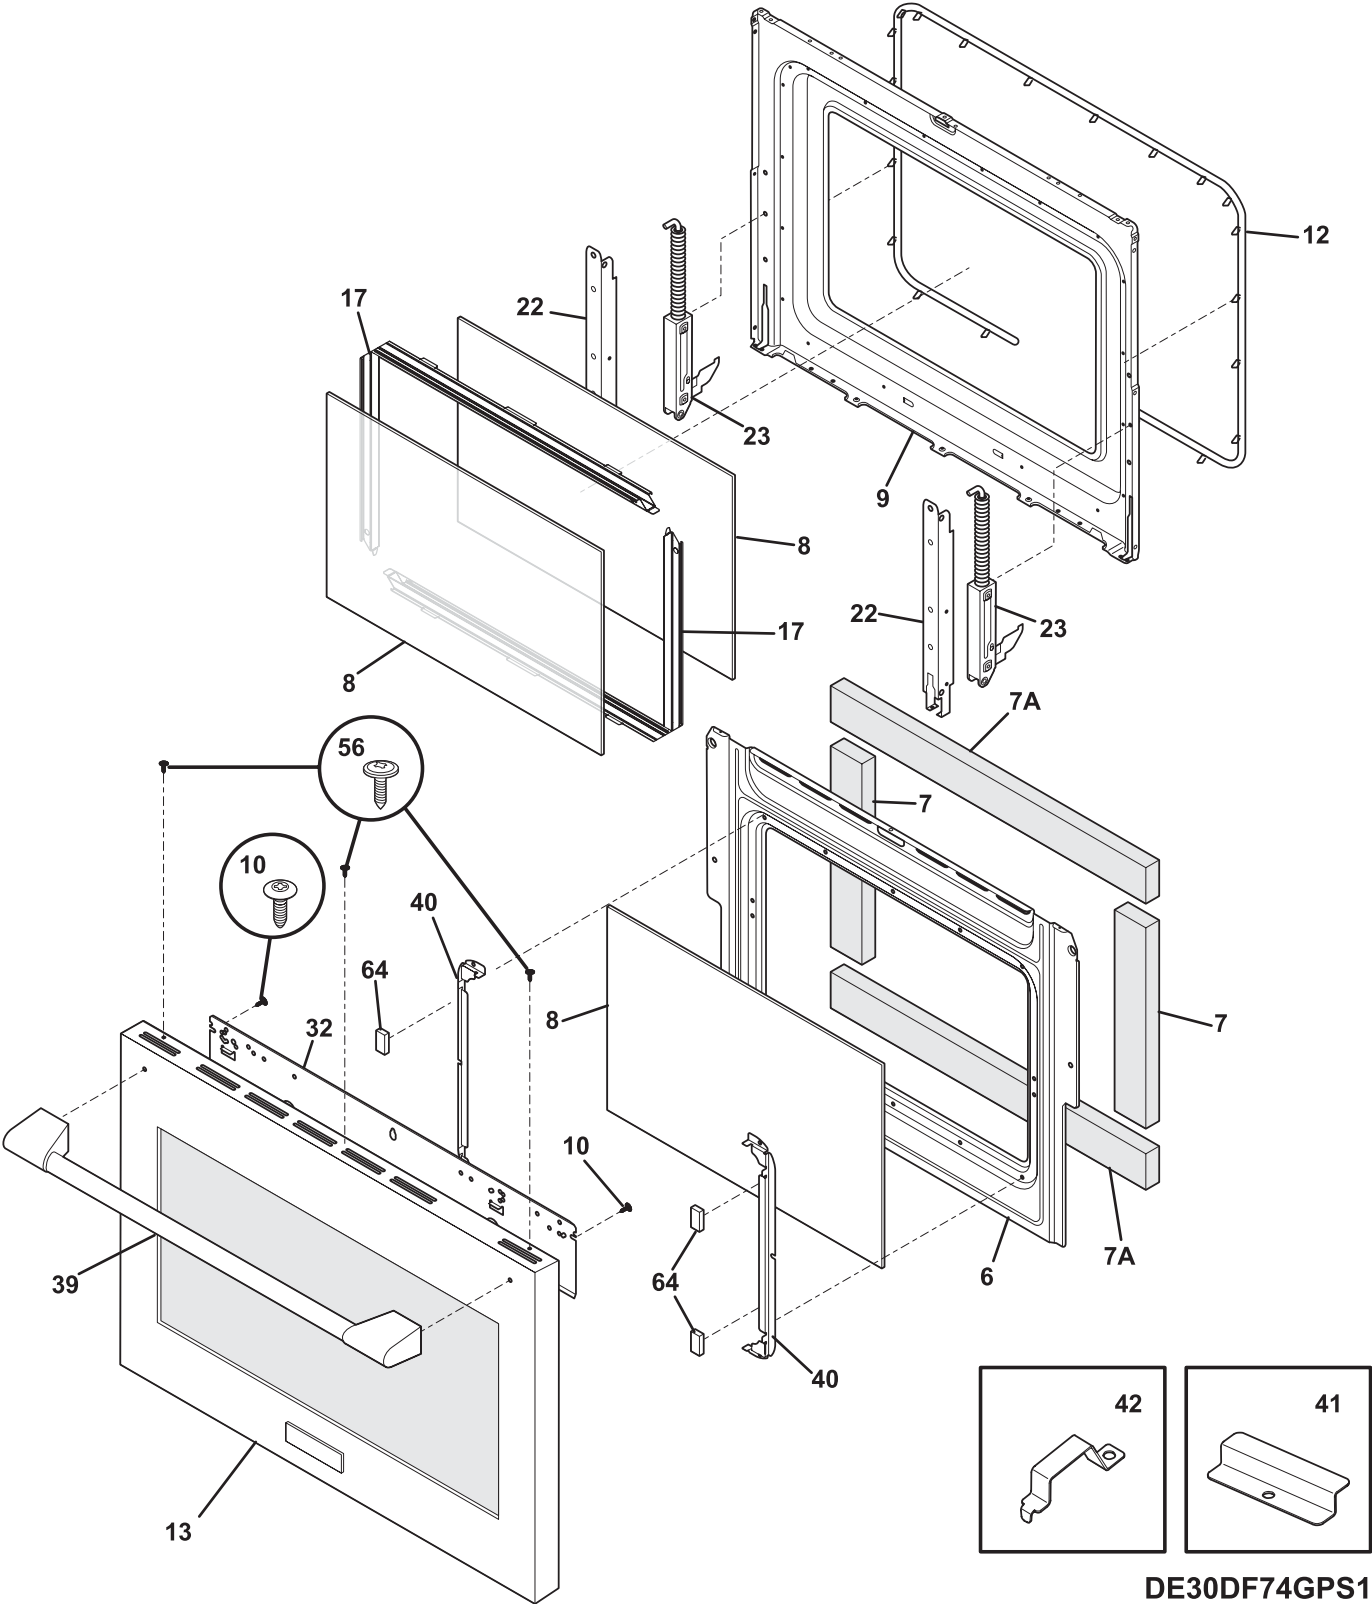

DOOR

POS. NO	PART NO.	DESCRIPTION
6	7318260522	Baffle, door
7	7318372000	Insulation, door, (2)
7A	7318372002	Insulation, door, (2)
8	7316117500	Glass, oven door, heat barrier
9	7318259633	Liner, oven door
10	75304400794	Screw, handle mtg, 10-32 x 3/4
12	7318053131	Gasket, oven door seal
13	7318344006	Door Assmebly, stainless/glass, w/badge
*	75303300265	Screw, 8-18 X 1/2, (4)
17	7318264710	Spacer, glass, lower, (2)
22	7318353803	Retainer, hinge
23	7318244300	Hinge Assy
23*	75304437044	Screw, 10-32 x 1/4, black, (4)
32	7318057204	Deflector, handle
39	7318392421	Handle, door
40	7318242702	Bracket, glass holder, door, (2)
41	7318370600	Bracket, glass retainer, (2)
42	7318382301	Bracket, glass retainer, (4)
56	75304436875	Screw, 8-18 X 1/2, black
64	7318165800	Spacer
*	7316433603	Label, anti-tip
*	7318163602	Cleaner, stainless steel
*	75303211311	Screw, 8 x 0.500
*	75304415832	Screw, 8-18 x 0.406

WIRING DIAGRAM

